


Installation guide


Plug for AKS-/MBS-series

060R9514



060R9514

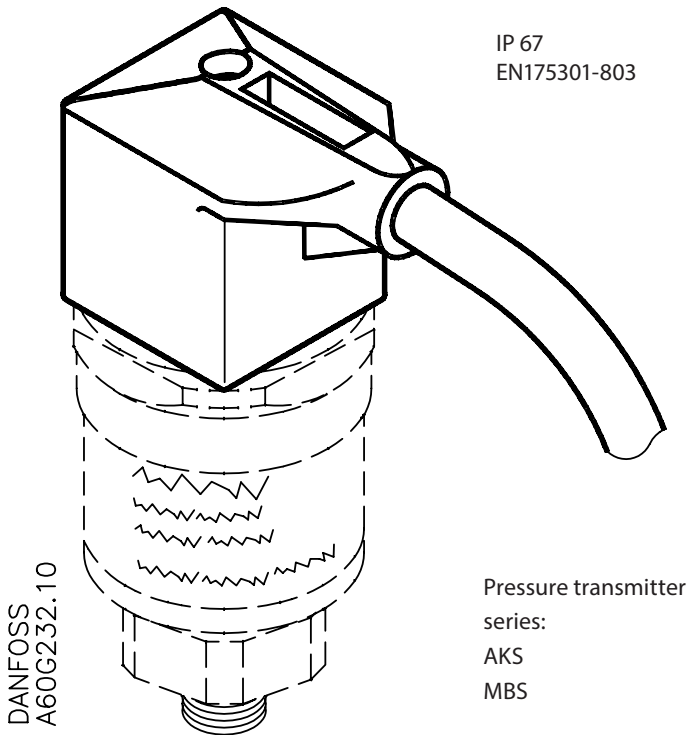

4 - 20 mA output

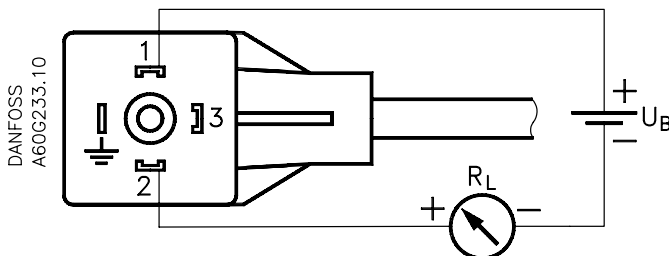

0-5 V, 1-6 V, 0-10 V d.c. output, ratiometric 10 - 90% V supply

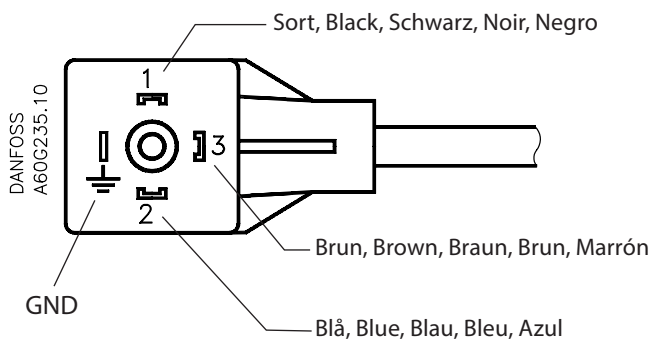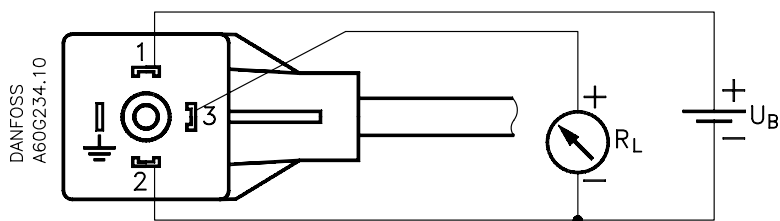

Ved tilslutning til AKC&AK-CC-regulatorer må den gul/grønne ledning ikke anvendes.

At connection to AKC&AK-CC-controllers the yellow/green wire must not be used.

Bei Anschluß an AKC&AK-CC-Reglern darf der gelb/grüne Leiter nicht verwendet werden.

Ne pas utiliser le conducteur jaune-vert lors du raccordement des régulateurs AKC&AK-CC.

Cuando se conecta a un controlador AKC&AK-CC, no se debe utilizar el cable amarillo/verde.

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.